




Z21 FW V1.20 or higher
LocoNet T (Master) 12VDC, 500mA

L-BUS

LocoNet layout modules ←

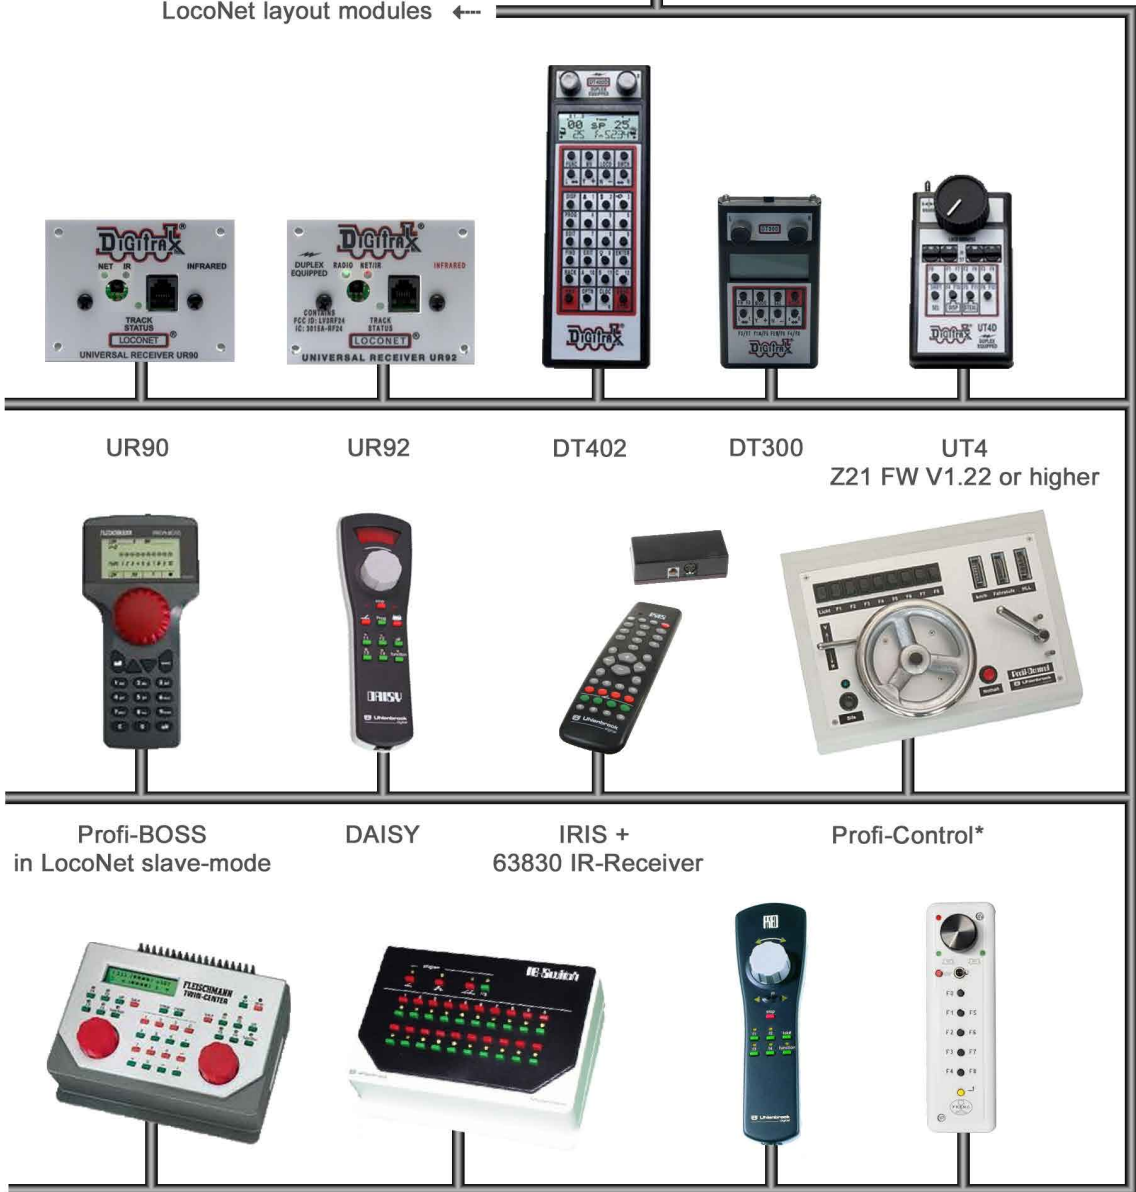

UR90

UR92

DT402

DT300

UT4

Z21 FW V1.22 or higher

Profi-BOSS

in LocoNet slave-mode

DAISY

IRIS +

63830 IR-Receiver

Profi-Control*

TWIN-CENTER, Intellibox,
TWIN-CONTROL, IB-Control
in LocoNet slave.mode

IB-Switch

FRED*

FREMO FRED*

TWIN-CENTER: slave-mode with
FW V2.000 special option 844=1
Intellibox: slave-mode with
FW V2.001 special option 844=2
(i.e. LocoNet power source=off)

Activating LocoNet slave-mode on
PROFI-BOSS:
1. C + alt
2. change MASTER to SLAVE
3. confirm

* Take over a loco address by
using the dispatch procedure
in Z21_Maintenance.exe
and App (planned for Q4/13)